

e-medical™ keyboard GL

High quality glass keyboard,
designed for use
in the medical field.




Perfectly suited for all areas in which hygiene is a must.

The e-medical™ keyboard GL has been designed for a long service life in the field of medicine. It is characterised by a high-quality design and a well thought-out material combination: The front is made of hardened glass, the rest of the housing is made of ABS plastic. The e-medical™ keyboard GL therefore provides important prerequisites for easy and quick cleaning. This optimal disinfection combined with the touch functionality and a switchable touchpad make it an ideal solution in hospitals or doctor's surgeries.

Benefits:

- › High quality design
- › Alphanumeric glass keyboard
- › IP65 – front sealing
- › Can be operated with gloves
- › Easy to clean
- › Integrated touchpad
- › USB port

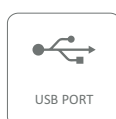

e-medical™ keyboard GL



The e-medical™ keyboard GL consists of hardened glass on the front and a robust ABS housing.



The USB port, via which the keyboard can be operated and charged, is provided with a cover so that the medical e-medical™ keyboard GL is easy to clean both on the smooth glass top and all around.



The alphanumeric keyboard has an integrated „Macbook“ touchpad and can be operated with gloves.

Technical Data	e-medical™ keyboard GL
Number of keys	105 keys
Degree of protection	IP65
Compatible OS	Microsoft® Windows, Mac OSX, Android
Dimensions (LxWxH)	436 x 160 x 20 mm
Material	Hardened glass, robust ABS housing
Coating	insensitive to fingerprints
Touchpad size (LxW)	119 x 102 mm
Weight	0,87 kg
Color	white
Layout	DE
Interface	USB, Bluetooth & RF via Dongle
Operating temperature	20°C bis +60°C
Standards	FCC, CE, ROHS
Scope of delivery	Micro USB kable, cleaning cloth
Item No.	2011997